
HIKVISION

Face Recognition Terminal

Quick Start Guide

UD19518B-E

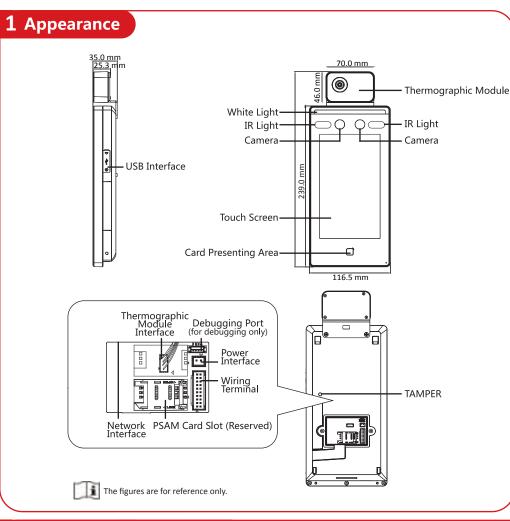


3.1 Device Wiring (Normal)



Installation Environment:

Avoid backlight, direct sunlight, and indirect sunlight.
 For better recognition, there should be light source in or near the installation

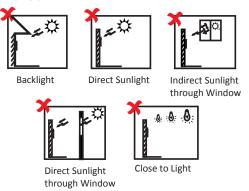

Temperature Measurement Environment:


- Sunlight, wind, hot/cool air from air conditioner and other external factors, which
 may affect surface temperature, will create the deviation of the temperature
 measurement. In order to get an accurate result, make sure the device is applied
 indoors and windlessly (where is relatively isolated from the outdoors). The working temperature should keep between 10 °C and 35 °C. If there are no suitable environments for temperature measurement (the area faces the indoor and connects the outdoor, the area at the door of the indoor environment, etc.), building a temporary temperature measurement environment is suggested.
- Influence Factors of Temperature Measurement:
 Wind: The wind will take the heat away, which may affect the measurement

Sweat: The sweat will take the heat away, which may affect the measurement Air Conditioner (Cool Air): If the indoor temperature is low, the surface

temperature may also lower than the actual temperature, which may affect the measurement result. Air Conditioner (Heat) or Heating: If the indoor temperature is high, the surface

temperature may also higher than the actual temperature, which may affect the measurement result.

• In order to make the device work properly, you should wait for 90 min after the device is powered on

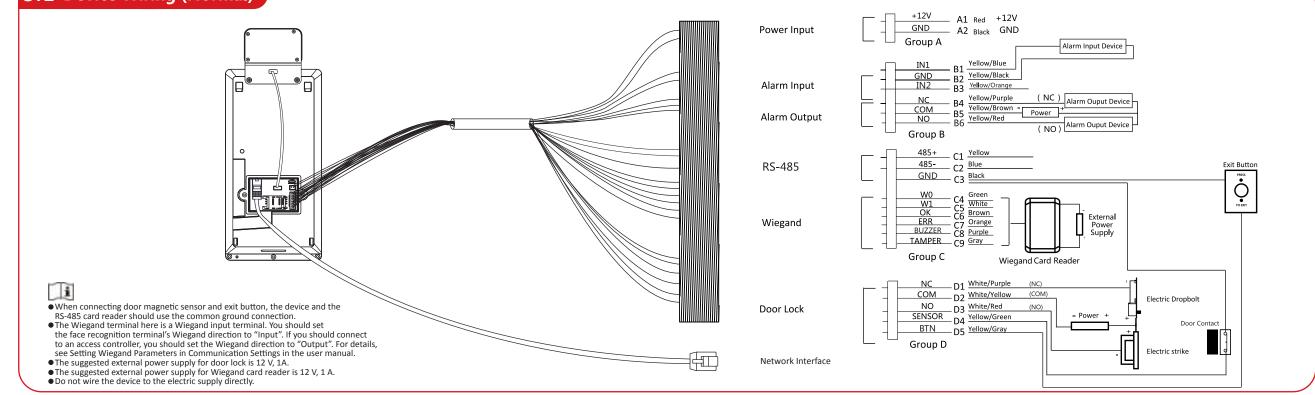

© 2021 Hangzhou Hikvision Digital Technology Co., Ltd. All rights reserved. This Manual Is the property of Hangzhou Hikvision Digital Technology Co., Ltd. or its affiliates (hereinafter referred to as "Hikvision"), and it cannot be reproduced, changed, translated, or distributed, partially or wholly, by any means, without the prior written permission of Hikvision. Unless otherwise expressly stated herein, Hikvision does not make any warranties, guarantees or representations, express or implied, About this Manual, any information contained herein.

Is Manual ual includes instructions for using and managing the Product. Pictures, charts, images and all other ion hereinafter are for description and explanation only. The information contained in the Manual is o change, without notice, due to firmware updates or other reasons. Please find the latest version anual at the Hikvision website (https://www.hikvision.com/). et hydronau with the guidance and assistance of professionals trained in supporting the Product.

rks Acknowledgement W and other Hikvision's trademarks and logos are the properties of Hikvision in various

JWK/132/00/ and other Hikvision's trademarks and logos are the properties of Hikvision in various jurisdictions. Other trademarks and logos mentioned are the properties of their respective owners. To THE MAXMUM EXTENT PERMITTED BY APPLICABLE LAW, THIS MANUAL AND THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, ARE PROVIDED 'AS IS' AND 'WITH ALL FAULTS AND ERRORS' HIKVISION MARKES NO WARRANTIES, EXPRANDES, OR PARED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, OR FITNISS' FOR A PARTICIDUAR PURPOSE, THE USE OF THE CONSEQUENTIAL, INCLORENTAL, OR INDIRECT DAMARDES, INCLUDING ALMONG, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROTIFS, BUSINESS INTERRUPTION, OR LOSS OF DATA, CORRUPTION OF SYSTEMS, OR LOSS OF DOCUMENTIAL, INCLORENTAL, OR INDIRECT DAMARDES, INCLUDING ALMONG, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROTIFS, BUSINESS INTERRUPTION, OR LOSS OF DATA, CORRUPTION OF SYSTEMS, OR LOSS OF DOCUMENTIAL, INCLORENTAL, OR INDIRECT DAMARDES, INCLUDING AMONG OTHERS, DAMARDES FOR LOSS OF DOCUMENTIAL, INCLORENTAL, OR INDIRECT DAMARDES, INCLUDING AMONG OTHERS, DAMAGES FOR LOSS OF OWILL AND TAKE ANY RESPONSIBILITY OF SUCH DAMAGES OR LOSS. OF BUSINESS PROTIFS, BUSINESS INTERRUPTION, OR LOSS OF DATA, CORRUPTION OF SYSTEMS, OR LOSS OF DOCUMENTIAL, INCLORE OF INTERRUPTION, OR LOSS OF DATA, CORRUPTION OF SYSTEMS, OR LOSS OF OWILL ACKNER OWNELDGE THAT THE NATURE OF INTERRUPT PROVIDES FOR INHERRINT SECURITY RESULT, PROVIDED ADVISED OF THE FOSSIBILITY OF SUCH DAMAGES OR LOSS OT UACKNERGES RESULTING FROM CYBER-ATTACK, NARD STREATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER-ATTACK, NARD STREATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER-ATTACK, NORNS TO THE APULGABLE LAWS, AND YOU ARE SOLEY. RESPONSIBLE FOR ENSUING THAT YOUR USE CONFORMS TO THE APULGABLE LAWS, AND YOU ARE SOLEY. PROVIDER FOR ENSUING THAT YOUR USE CONFORMS TO THE APULGABLE LAWS, AND YOU ARE SOLEY. PROVIDER FOR ENSUING THAT YOUR USE CONFORMST TO THE APULGABLE LAWS, AND YOU ARE SOLEY. PROVIDENT FOR

UPPORT OF HUMAN RIGHTS ABUSES. N THE EVENT OF ANY CONFLICTS BETWEEN THIS MANUAL AND THE APPLICABLE LAW, THE LATER PREVAILS.

Data Protection During the use of device, personal data will be collected, stored and processed. To protect data, the development of Hikvision devices incorporates privacy by design principles. For example, for device with facial recognition features, biometrics data is stored in your device with encryption method; for fingerprint As data controller, you are advised to collect, store, process and transfer data in accordance with the applicable data protection laws and regulations, including without limitation, conducting security controls to safeguard personal data, such as, implementing reasonable administrative and physical security controls, conduct periodic reviews and assessments of the effectiveness of your security controls.

Scan the QR code to get the user manual for detailed information. Note that mobile data charges may apply if Wi-Fi is unavailable.




Use only power supplies listed in the user instructions: 00IC12.0-24P-D MOSO Power Supply Technology Co., Ltd 00IC12.0-24P-GE IOSO Power Supply Technology Co., Lt

Make sure the output of external power supply fulfils LPS.


- ① Drill holes on the wall or other surface and install the gang box.
- 2 Connect the thermographic module and the main body of the device.
- Use 5 supplied screws (4_KA4×22-SUS) to secure the mounting plate on the gang box. 3 Align the device with the mounting plate and hang the device on the mounting plate.
- Make sure the two sheets on each side of the mounting plate have been in the slots at the back of the device.
- 4 Use 2 supplied screws (SC-M4×14.5TP10-SUS) to secure the device and the mounting plate.
- S After installation, for the proper use of the device (outdoor use), stick the protection film (parts of models supplied) on the screen.

1

- When the screw's head is beneath the device surface, the device is secured.
- The installation height here is the recommended height. You can change it according to your actual needs. • You can also install the device on the wall or other places without the gang box. For details, refer to the User Manual
- For easy installation, drill holes on mounting surface according to the supplied mounting template.

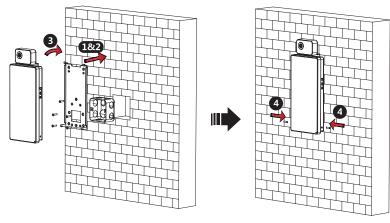

3.2 Device Wiring (With Secure Door Control Unit)

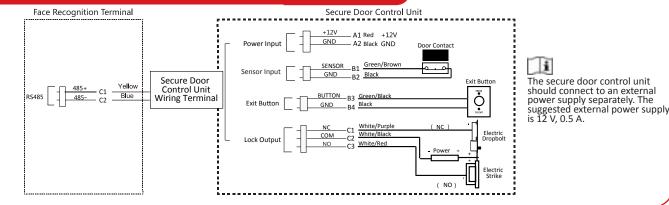

4 Activation

- Power on and wire the network cable after installation. You should activate the device before the first login.
- If the device is not activated yet, it will enter the Activate Device page after powering on.
- Steps: 1. Create a password and confirm the password.
- 2. Tap Activate to activate the device.
- For other activation methods, see the device user manual.

......

STRONG PASSWORD RECOMMENDED-We highly recommend you create a strong password of your own choosing (using a minimum of 8 characters, including upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password

monthly or weekly can better protect your product. ·····

6 Adding Face Information

- 1 Hold the screen surface and verify the identity to enter the main page
- 2. Enter the User Management page, tap + to enter the Add User page.
- 3. Set the user parameters according to actual needs.
- 4. Tap Face and collect the face information according to the instructions. You can view the captured picture at the upper right corner of the page. Make sure the face picture is in good quality and size. For details about the tips and positions when collecting or comparing the face picture, see the contents on the right.
- 5. Tap \checkmark to save the settings.

Go back to the initial page to start authentication. For other authentication methods, see the device user manual. Use other authentication methods if the device is affected by the light or other items.

Biometric recognition products are not completely applicable to antispoofing environments. If you require a higher security level, use multi ple authentica-tion modes

 
Tips When Collecting/ Comparing Face Picture

Expression

- Keep your expression naturally when collecting or comparing face pictures, just like the expression in the picture on the right.
- Do not wear hat, sunglasses, or other accessories that can affect the facial recognition function.
- Do not make your hair cover your eyes, ears, etc. and heavy makeup is not allowed.


Posture

In order to get a good quality and accurate face picture, position your face looking at the camera when collecting or comparing face pictures.



Size

 Make sure your face is in the middle of the collecting window.



5 Temperature Measurement Settings


- 1 Hold the screen surface and verify the identity to enter the main page.
- 2. Tap "Temperature" to enter the Temperature Settings page. Configure the parameters.

Enable Temperature Detection:

When enabling the function, the device will authenticate the permissions and at the same time take the tempearture. When disabling the device, the device will authenticate the permissions only.

- Over-Temperature Alarm Threshold:
- Edit the threshold according to actual situation. If the detected temperature is higher than the configured one, an alarm will be triggered. By default, the value is 37.3°.
- Temperature Compensation: If the measured temperature is higher/lower than the actual object's temperature, you can set the compensation
- temperature here. Available range: -99 °C to 99 °C.
- Door Not Open When Detecting Abnormal Termperature: When Enabling the function, the door will not open when the detected temperature is higher than the configured temperature threshold. By default, the temperature is enabled.
- Temperature Measurement Only:
- When enabling the function, the device will not authenticate the permissions, but only take the temperature. When disabling the function, the device will authenticate the permsissions and at the same time take the temperature.
- Unit: Select a temperature unit according to your preference.
- Measurement Area Calibration/Measurement Area Settings Configure the temperature measurement area and the correction parameters. Black Body Settings:
- When enabling the function, you can configure the black body's parameters, including the distance, and emissivity.

Positions When Collecting/ Comparing Face Picture (Recommended Distance: 0.5m)

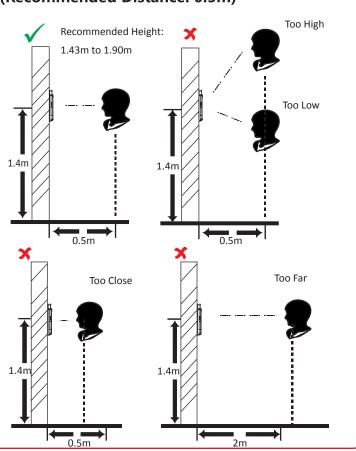

(Regulatory Information

lease take attention that changes or modification not expressly approved by the party responsible for pliance could void the user's authority to operate the equipment. FCC compliance: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected

Consult the dealer or an experienced radio/TV technician for help.

This equipment should be installed and operated with a minimum distance 20cm between the radiator and your body. FCC Conditions

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions

This device may not cause harmful interference.

2. This device must accept any interference received, including interference that may cause undesired operation



This product and - if applicable - the supplied accessories too are marked with "CE" and comply therefore with the applicable harmonized European standards listed under the RE Directive 2014/53/EU, the EMC Directive 2014/30/EU, the RoHS Directive 2011/65/EU.



2006/66/EC (battery directive): This product contains a battery that cannot be disposed of as unsorted municipal waste in the European Union. See the product documentation for specific battery information. The battery is marked with this symbol, which may include lettering to indicate cadmium (Cd), lead (Pb), or mercury (Hg). For proper recycling, return the battery to your supplier or to a designated collection point. For more information see: www.recyclethis.info



2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see: www.recyclethis.info

is device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

(1) this device may not cause interference, and

(2) this device must accept any interference, including interference that may cause undesired operation of the device

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radioexempts de licence. L'exploitation est autorisée aux deux conditions suivantes

(1) l'appareil ne doit pas produire de brouillage, et

(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

COMPLIANCE NOTICE: The thermal series products might be subject to export controls in various countries or regions, including without limitation, the United States, European Union, United Kingdom and/or other member countries of the Wassenaar Arrangement. Please consult your professional legal or compliance expert or local government authorities for any necessary export license requirements if you intend to transfer, export, re-export the thermal series products between different countries

Safety Instruction

These instructions are intended to ensure that user can use the product correctly to avoid danger or property loss

The precaution measure is divided into Warnings and Cautions.

Warnings: Neglecting any of the warnings may cause serious injury or death. Cautions: Neglecting any of the cautions may cause injury or equipment damage.

Warnings

Itheelectronicoperationshould bestrictly compliance with the electrical safety regulations, fire

prevention regulations and other related regulations in your local region easeusethenoweradapter which is provided by normal company. The power consumption cannot be less than the required value.

Construction overload may cause over-heat fire hazard.

Reasemakesurethatthepowerhasbeen disconnected before you wire, install or dismantle the device.

Thentheproductisinstalledonwall or ceiling, the device shall be firmly fixed.

moke,odorsornoiserisefromthe device, turn off the power at once and unplug the power cable, and then please contact the service center.

heproductdoesnotworkproperly, please contact your dealer or the nearest service center Never attempt to disassemble the device yourself. (We shall not assume any responsibility for problems caused by unauthorized repair or maintenance.)

Cautions

Onotdropthedeviceorsubjectit to physical shock, and do not expose it to high electromag netism radiation. Avoid the equipment installation on vibrations surface or places subject to shock

(ignorance can cause equipment damage). ©onotplacethedeviceinextremelyhot (refer to the specification of the device for the detailed operating temperature), cold, dusty or damp locations, and do not expose it to high electromagnetic radiation

The device cover for indoor use shall be kent from rain and moisture

posingtheequipmenttodirectsunlight, low ventilation or heat source such as heater or radiato s forbidden (ignorance can cause fire danger).

Conotaimthedeviceatthesunor extra bright places. A blooming or smear may occur otherwise (which is not a malfunction however), and affecting the endurance of sensor at the same time. easeusetheprovidedglovewhenopenup the device cover, avoid direct contact with the device

cover, because the acidic sweat of the fingers may erode the surface coating of the device cover

easeuseasoftanddryclothwhenclean inside and outside surfaces of the device cover, do no use alkaline detergents.

●easekeepallwrappersafterunpackthemfor future use. In case of any failure occurred, you need to return the device to the factory with the original wrapper. Transportation without the original wrapper may result in damage on the device and lead to additional costs.

Diproperuseorreplacementofthebattery may result in hazard of explosion Replace with the same or equivalent type only. Dispose of used batteries according to the instructions provided by the battery manufacturer.

Dometricrecognitionproducts are not completely applicable to anti-spoofing environments. If

you require a higher security level, use multiple authentication modes. Coords and the security level and the sec should be at least 2 meters away from the

light, and at least 3 meters away from the window or the door. Input voltage should meet both the SELV (Safety Extra Low Voltage) and the Limited Power Source vith 100~240 VAC or 12 VDC according to the IEC60950-1 standard. Please refer to technical

specifications for detailed information.